PARTS LIST

for

Whirlpool CORPORATION

30" GAS FREESTANDING RANGE ELECTRONIC IGNITION STANDARD CLEAN OVEN

MODEL SF3000EWW1

▲W-White, N-Almond

FSP®

FOR CUSTOMER SATISFACTION ALWAYS USE
FACTORY SPECIFICATION PARTS

FSP®

Whirlpool CORPORATION
Benton Harbor, Michigan.

5-91 Litho in U.S.A.

© 1991 WHIRLPOOL CORPORATION

Part No.4321205

EXTERNAL OVEN PARTS

For Model: SF3000EWW1

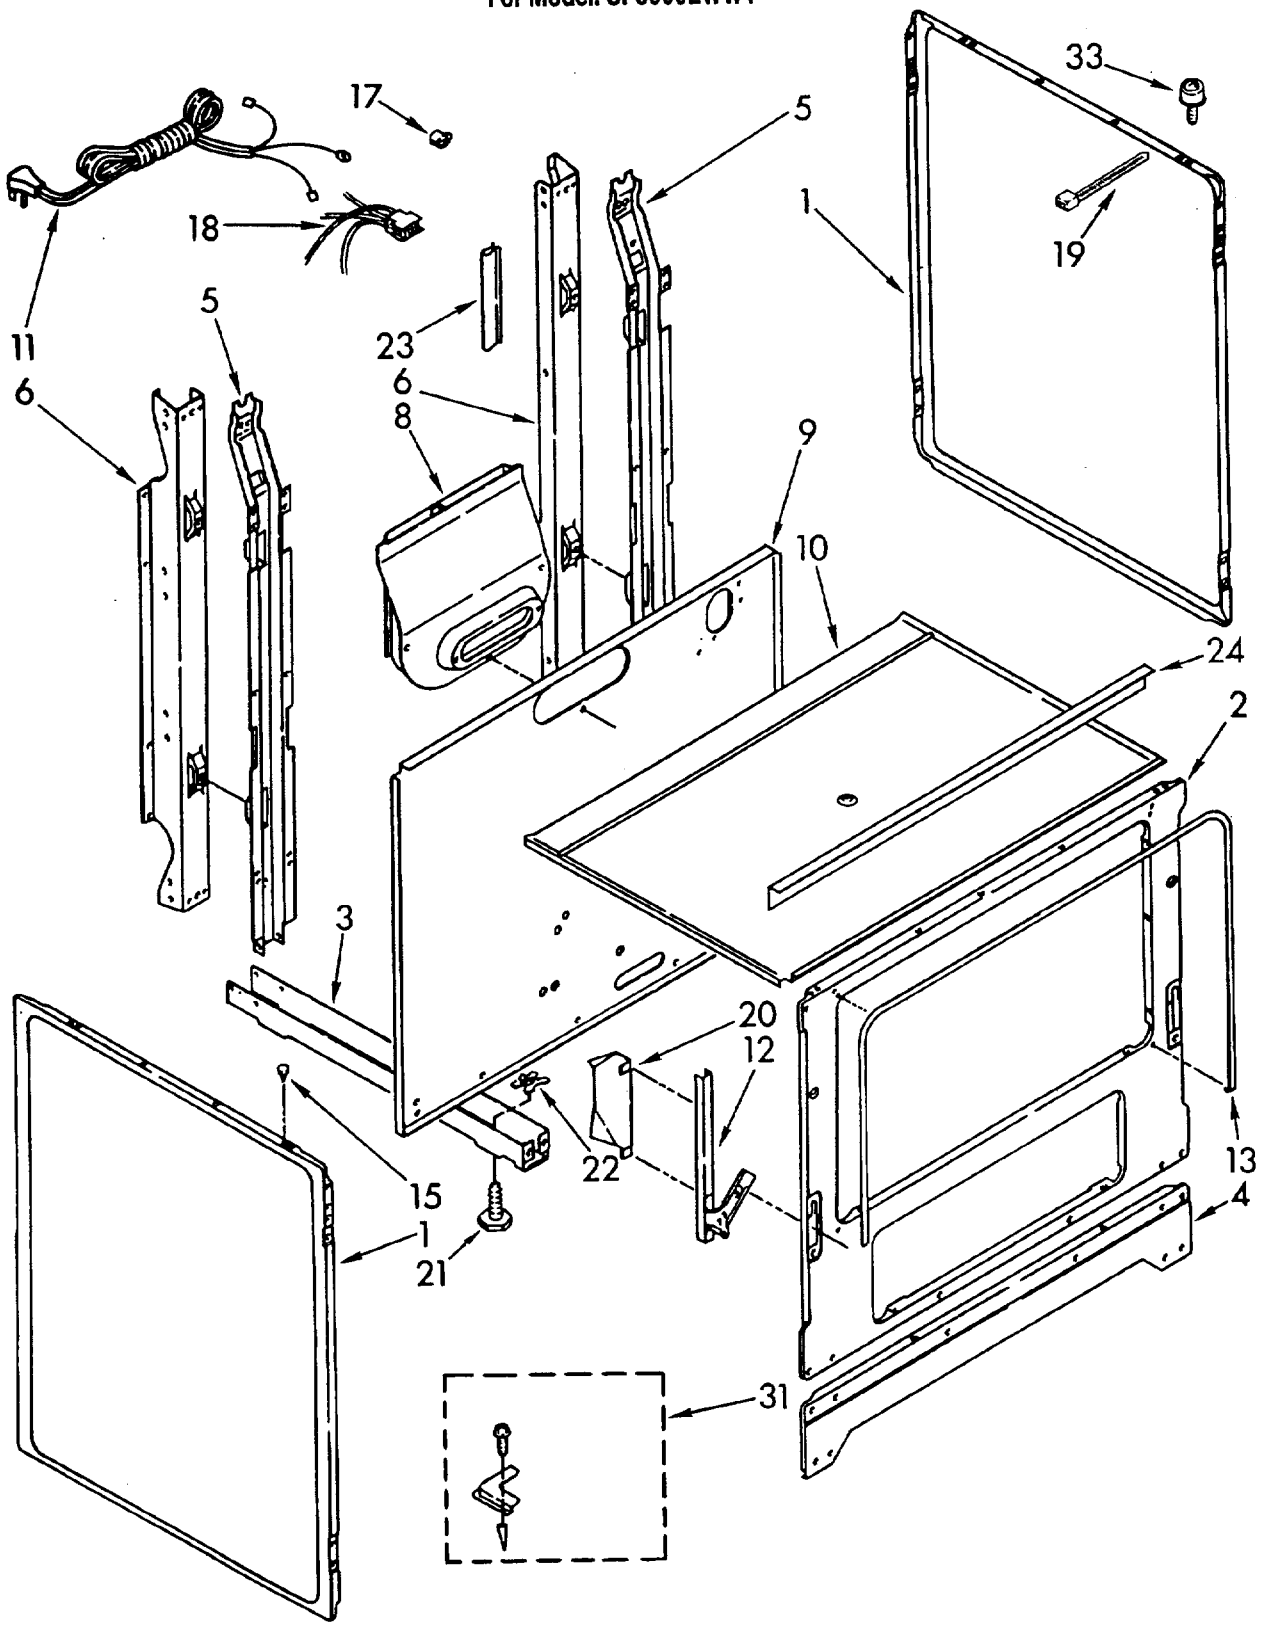

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE:The screws and nuts required to attach a part are listed immediately following that part.

1		Panel, Side (2)
	4157000	White
	4157130	Almond
	4157111	Screw, 10-12 X 1/2 (10)
2	4320464	Frame, Front
	4157111	Screw, 10-12 X 1/2 (6)
3	4157005	Rail, Base (2)
4	4157006	Base, Front
	4315330	Screw, 8-18 X 1/2 Black (2)
5	4157011	Support, Main (2)
	4157111	Screw, 10-12 X 1/2 (12)
	4320577	Screw, 10-32 X 1/2 (1)
6	4315382	Support, Rear (2)
	4157111	Screw, 10-12 X 1/2 (6)
	4157114	Screw, 10-12 X 1/2 (4)
8	4157014	Flue, Box
	4157114	Screw, 10-12 X 1/2 (3)
9	4315380	Panel, Rear
	4157111	Screw, 10-12 X 1/2 (5)
10	4320411	Burner Box
	4157111	Screw, 10-12 X 1/2 (3)
11	4157021	Cord, Power
12	4320451	Hinge, Door (2)
	4157124	Screw, 10-24 X 3/8 (2)
	4157117	Screw, 10-12 X 1/2 (2)
13	4320463	Seal, Door
15	4315408	Bumper, Cooktop (2) 01 6-20 X 1" (2)
17	4157143	Strain Relief
18	4157220	Block, Disconnect
19	4315726	Tie, Wire (2)
20	4157325	Shield, Insulation
21	4157161	Leg, Leveler (4)
	4157111	Screw 10-12 X 1/2 (3)
22	4157332	Nut (4)
23	4157132	Safe Edge
24	4320479	Extension, Burner Box
31	4315756	Anti Tip Kit
33	4315408	Locator stud (2)
	4315409	Stud Screw (2)

OVEN DOOR AND BROILER PARTS

For Model: SF3000EWW1

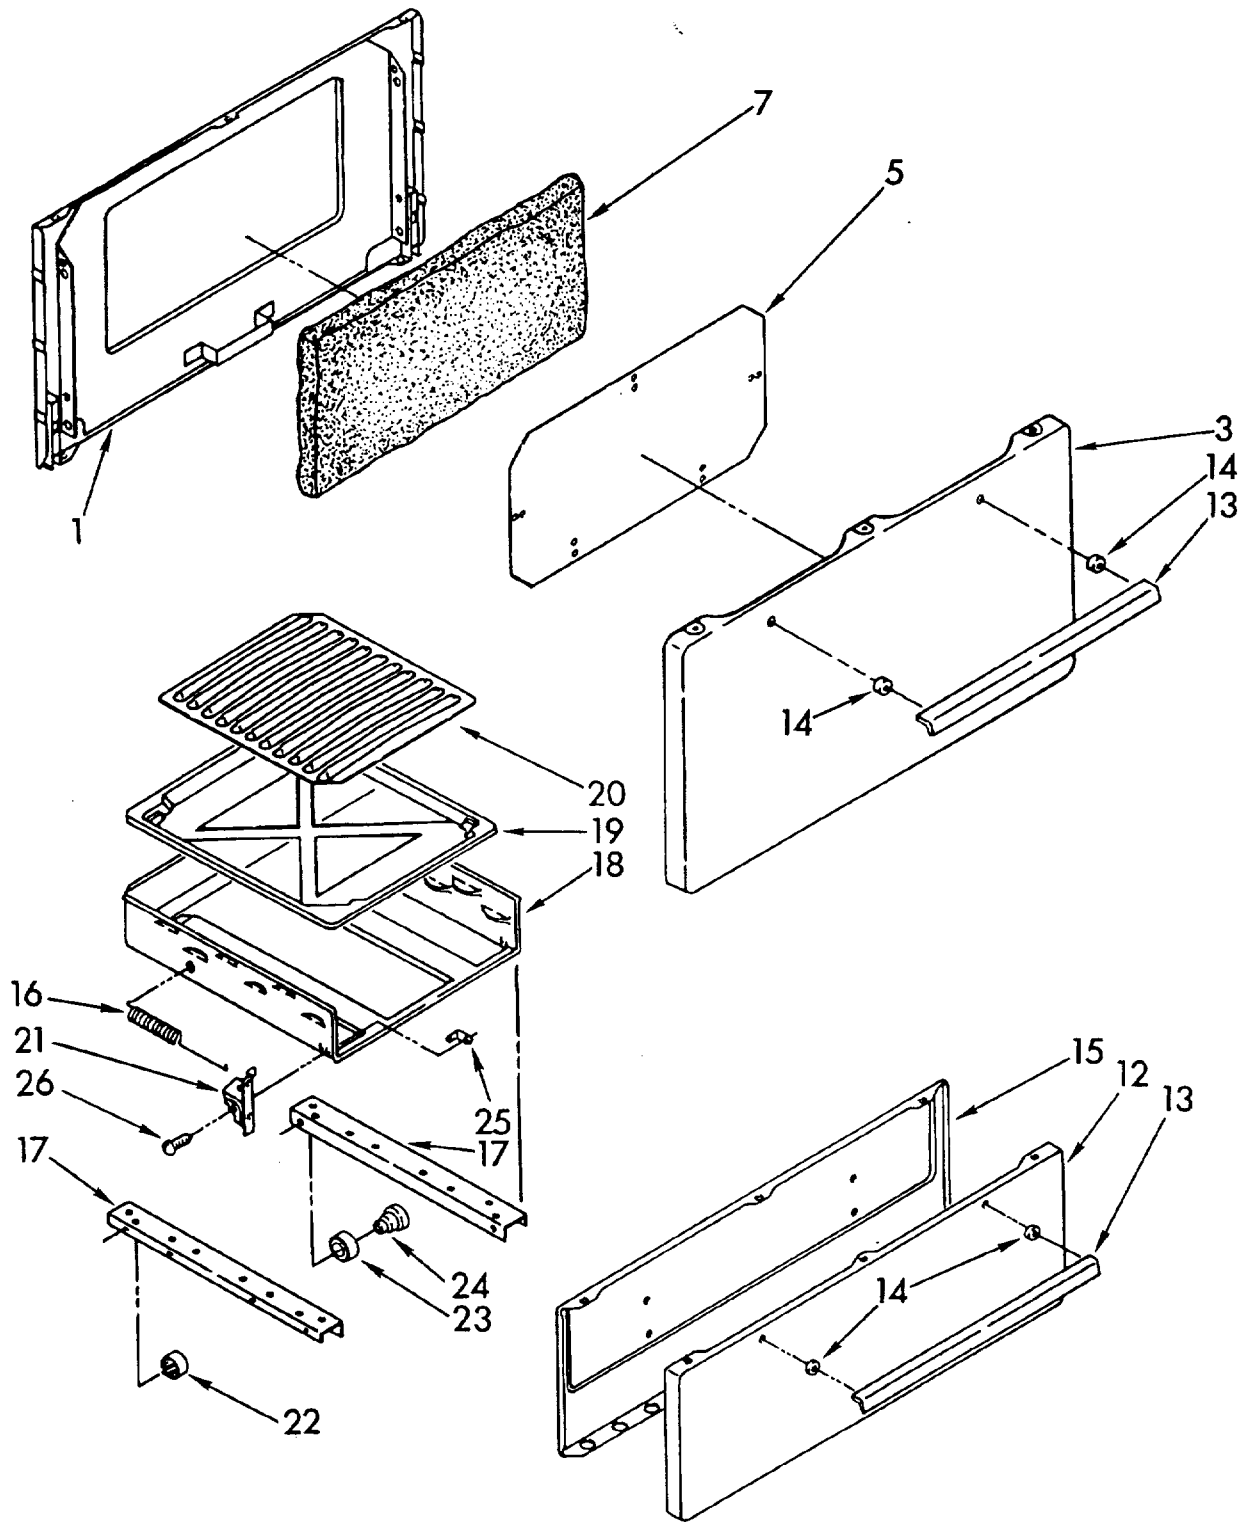

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE:The screws and nuts required to attach a part are listed immediately following that part.

1	4320562	Liner, Door
3		Panel, Door
	4320785	White
	4320786	Almond
	4157117	Screw, 10-12 X 1/2 (6)
5	4320352	Ring, Hold Down
	4315391	Screw, 10-12 X 1/2 (6)
7	4157033	Insulation
12		Panel, Broiler
	4320457	White
	4320458	Almond
	4320742	Screw, 10-12 X 1/2 (5)
13	4157040	Handle, Door
	4320579	Screw, 10-12 X 5/8 (2)
14	4157041	Spacer (4)
15	4315087	Liner, Broiler Door
16	4157043	Spring (2)
17	4315383	Track, Upper (2)
	4315391	Screw, 10-12 X 1/2 (4)
18	4315088	Liner, Broiler
	4157117	Screw, 10-12 X 1/2 (4)
19	4315095	Pan, Broiler
20	4315094	Grid
21		Hinge, Door
	4157048	Right Hand
	4157049	Left Hand
	4157111	Screw, 10-12 X 1/2 (4)
	4157120	Screw 10-24 X 3/8 (2)
22	4315387	Bumper, Nylon1(4)
23	4315388	Roller (2)
24	4315381	Roller Pin (2)
25	4157053	Plate (2)
26	4157054	Screw (2)

BACKGUARD PARTS

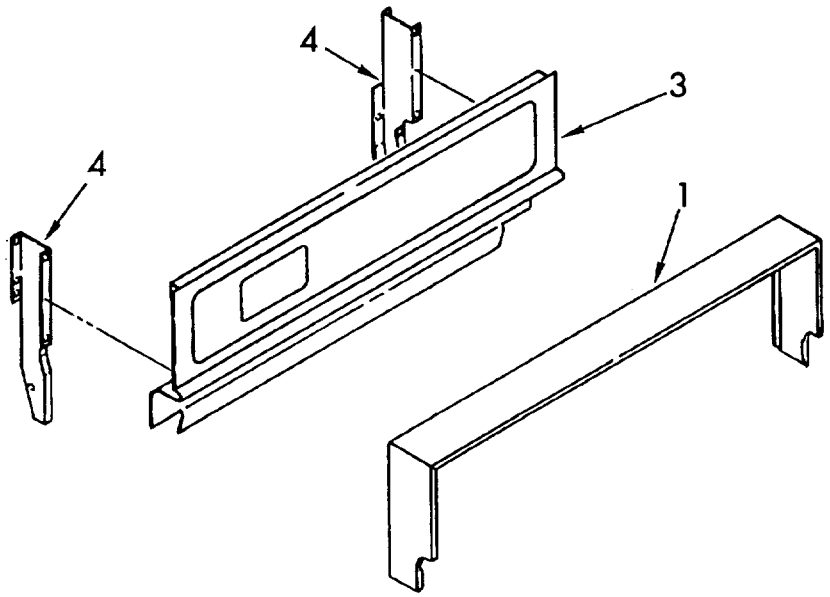

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE:The screws and nuts required to attach a part are listed immediately following that part.

1	4320775	Frame
	4157121	Screw, 10-12 X 3/8 (6)
3		Panel, Backguard
	4157158	White
	4157528	Almond
4		Support, Backguard
	4157160	Right Hand
	4157159	Left Hand

COOKTOP AND MANIFOLD PARTS

For Model: SF3000EWW1

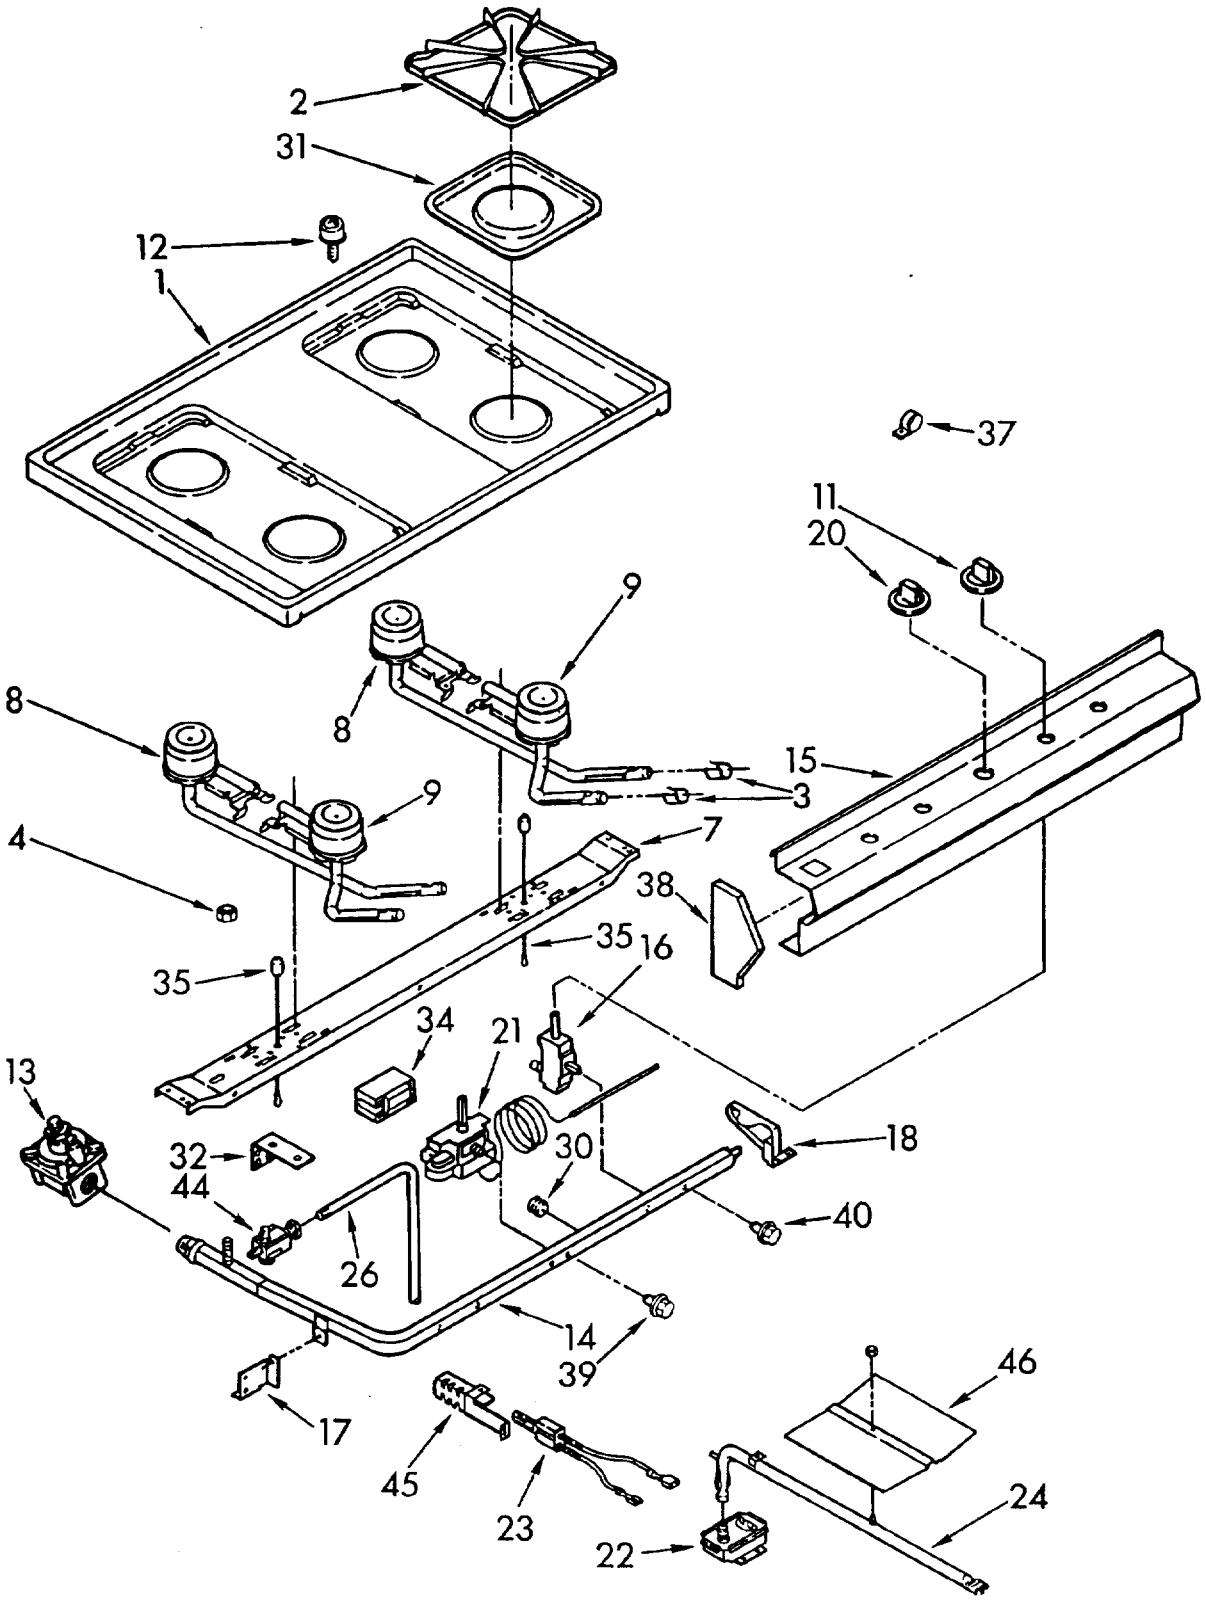

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

NOTE:The screws and nuts required to attach a part are listed immediately following that part.

1		Cooktop
	4314891	White
	4314892	Almond
2	4157196	Grate (4)
3	4157074	Shutter, Air (4)
4	4157075	Nut, Hex
7	4157078	Support, Burner
	4157121	Screw, 10-12 X 3/8 (4)
8	4157206	Burner, Rear (2)
	4157121	Screw, 10-12 X 3/8 (2)
9	4157205	Burner, Front (2)
	4157121	Screw, 10-12 X 3/8 (2)
11	4320580	Knob, Burner (4)
12	4314933	Locator Stud (2)
	4314910	Screw, 10-12 X 3/8 (4)
13	4157084	Regulator, Pressure
14	4320581	Manifold
	4157111	Screw, 10-12 X 1/2 (1)
15	4320582	Panel, Manifold
16	4314814	Valve, 90~ (4) (Includes Ill. No. 40)
17	4320443	Support, Manifold (L.H.)
	4157111	Screw, 10-12 X 1/2 (4)
18	4320444	Support, Manifold (R.H.)
	4157111	Screw, 10-12 X 1/2 (4)
20	4320593	Knob, Thermostat
21	4320594	Thermostat
22	4320442	Valve, Safety
	4157125	Screw, 10-12 X 1/2 (2)
23	4320445	Pilot
	4157126	Screw, 10-12 X 3/8 (1)
24	4320441	Burner, Oven
26	4320595	Tubing 3/8" (Manifold To Safety Valve)
30	4157167	Plug, 1/8 Pipe
31	4157171	Plate, Module
32	4157180	Switch, Valve
34	4320446	Module, Spark
35		Ignitor
	4179204	R.H.
	4179205	L.H.
37	4157185	Strain Relief
38		Endcap
	4320602	L.H.
	4320603	R.H.
39	4314816	Bolt, Thermostat Mounting (2)
40	4314817	Bolt, Valve Mounting
44	4157661	Valve, Shut Off
45	4320447	Bracket, Ignitor
46	4320440	Spreader, flame
	4157012	Nut

INSULATION

261514	Insulation, Fiberglass (1-1/2" X 24" X 120"
240132	Insulation, Fiberglass (1-1/2" X 22" X 120"
241430	Foil, Aluminum Oven (18" X 25')

LITERATURE PARTS

LIT4315703	Use & Care Guide
LIT4315709	Installation Instructions
LIT3149508	Cooking Guide
LIT4321205	Repair Parts List

INTERNAL OVEN PARTS

For Model: SF3000EWW1

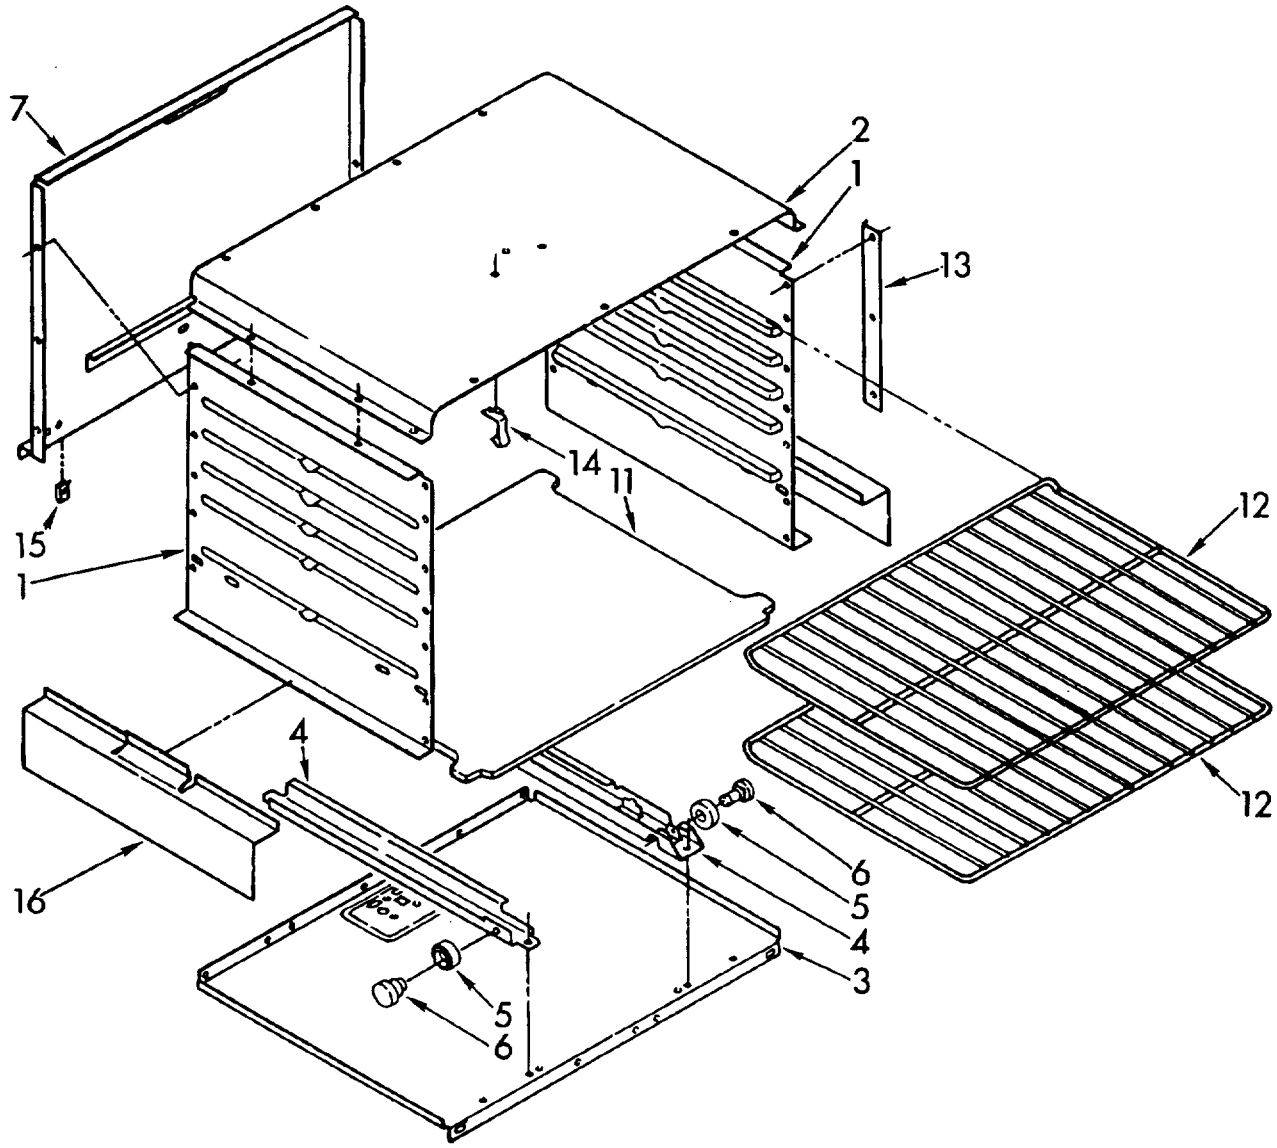

NOTE:The screws and nuts required to attach a part are listed immediately following that part.

1	4315753	Liner, Oven Side (2)
	4157111	Screw, 10-12 X 1/2 (6)
2	4315045	Liner, Oven Top
	4157111	Screw, 10-12 X 1/2 (4)
3	4315389	Baffle, Bottom
4		Track, Broiler
	4315384	Left Hand
	4315385	Right Hand
	4157111	Screw, 10-12 X 1/2 (2)
5	4315388	Roller (2)
6	4315381	Pin, Roller (2)
7	4315054	Liner, Oven Back
	4157117	Screw, 10-12 X 1/2 (2)
11	4315071	Bottom, Oven
12	4320809	Rack, Oven (2)
13	4315754	Support, Liner (2)
14	4157329	Clip, Thermo Bulb
15	4157330	Clip, Speed
16	4315082	Shield, Radiation